



TSC Flash Programmer

Model TFP2

USER'S MANUAL



4/27/2007

Revision 1.0

Teridian Semiconductor Corporation

6440 Oak Canyon Rd.

Irvine, CA 92618-5201

Phone: (714) 508-8800 • Fax: (714) 508-8878

<http://www.teridian.com/>

meter.support@teridian.com

Revision History

4/27/07 Rev. 1.0 Initial release.

Teridian Semiconductor Corporation makes no warranty for the use of its products, other than expressly contained in the Company's warranty detailed in the Teridian Semiconductor Corporation standard Terms and Conditions. The company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice and does not make any commitment to update the information contained herein.

TSC Flash Programmer Model TFP2

USER'S MANUAL

Table of Contents

- 1 GETTING STARTED 7**
 - 1.1 General..... 7**
 - 1.2 Safety and ESD Notes..... 7**
 - 1.3 Demo Board Contents 8**
 - 1.4 Compatibility 8**
 - 1.5 Suggested Equipment not Included 8**

- 2 TARGET CODE INITIALIZATION..... 9**
 - 2.1 Power Supply CONNECTION 10**
 - 2.2 RS232 Serial Connection..... 11**
 - 2.3 Serial Connection Setup..... 11**

- 3 TARGET FLASH MEMORY PROGRAMMING..... 13**
 - 3.1 Standalone Programming..... 16**
 - 3.2 PC User Interface Programming 17**
 - 3.3 ATE Factory Automation Programming 18**

- 4 PC USER INTERFACE 21**
 - 4.1 TFP2 CHKSUM.EXE Utility..... 21**
 - 4.2 TFP2 EEPROM Download..... 26**
 - 4.3 TARGET FLASH Memory Programming..... 29**
 - 4.4 Previously Programmed Device Verification 31**
 - 4.5 Device Status Check 32**
 - 4.6 Code Or Parameter Update 33**
 - 4.7 Parameter Preservation Programming 33**

- 5 BOOT LOADER..... 35**
 - 5.1 Boot Loader Operation 35**

- 6 STATUS INDICATIONS..... 37**
 - 6.1 Normal Operation 37**
 - 6.2 Error Conditions..... 37**

- 7 TFP2 HARDWARE SPECIFICATIONS 39**

List of Figures

Figure 2-1: Memory Size Configuration	9
Figure 2-2: TFP2 RS232 Connection to PC	10
Figure 2-3: Port speed, port bit setup and flow control	12
Figure 3-1: Target-LS Connection	13
Figure 3-2: Target-HS Connection	13
Figure 3-3: Target-LS Connector Pin Locations (looking at TFP2 endplate)	14
Figure 3-4: Target-HS Connector Pin Locations (looking at TFP2 endplate)	15
Figure 3-5: Standalone Configuration (shown with Target-LS cable for example)	16
Figure 3-6: PC User Interface Configuration (shown with Target-HS cable for example)	17
Figure 3-7: ATE Configuration (shown with Target-LS cable for example)	18
Figure 3-8: ATE Connector Pin Locations (looking at TFP2 endplate)	19
Figure 3-9: ATE Interface Flow Chart	20
Figure 4-1: CHKSUM.EXE Hex File Processing	21
Figure 4-2: CHKSUM.EXE Warning Display	22
Figure 4-3: TFP2 Power-Up Information Display	22
Figure 4-4: TFP2 Help Menu	23
Figure 4-5: TFP2 Intel Hex File Download to Internal EEPROM Command	26
Figure 4-6: TFP2 Select Target Intel Hex File	26
Figure 4-7: TFP2 Download in Progress	27
Figure 4-8: TFP2 Download Complete	27
Figure 4-9: TFP2 Download Fail due to Incorrect Memory Size Setting	28
Figure 4-10: TFP2 Target Mass Erase and Program Command	29
Figure 4-11: Existing Device's Security Bit Set	29
Figure 4-12: Programming Overrides Security Bit	30
Figure 4-13: Previously Programmed Device Check	31
Figure 4-14: Previously Programmed Device Check with Security Bit Set	31
Figure 4-15: Device Checksum and Security Bit Status	32
Figure 4-16: Device Checksum and Security Bit Status with Security Bit Set	32
Figure 4-17: Parameter Mode Selection	33
Figure 4-18: Parameter Mode Status	34
Figure 5-1: TFP2 Reprogram TFP2 Program Memory	35
Figure 5-2: TFP2 Boot Completion	36

List of Tables

Table 2-1: RS232 Straight cable connections.....	11
Table 3-1: Target-LS Connector Pins	14
Table 3-2: Target-HS Connector Pins.....	15
Table 3-3: ATE Connector Pins.....	18
Table 3-4: ATE Connector Pin Input Voltage Thresholds.....	19
Table 3-5: ATE Connector Pin Output Voltage Levels	19
Table 4-1: CHKSUM Utility Addresses	24
Table 4-2: CHKSUM Utility Output Data	24
Table 4-3: CHKSUM Utility Data Dependency.....	25
Table 4-4: Parameter Space Address Location	34

1

1 GETTING STARTED

1.1 GENERAL

The TSC Flash Programmer, Model TFP2 provides a standalone, FLASH memory programming tool for Teridian Semiconductor's embedded controllers. The TFP2 facilitates FLASH programming in a manufacturing production environment requiring minimum ancillary equipment. Once the TFP2 has been initialized with the target's program code, the target's FLASH memory can be programmed either manually via operator push button, or controlled via a factory automation computer (ATE).

The target's program code is stored in a standard 32 pin PLCC PROM internal to the TFP2. A board socket is provided for accommodating externally programmed ROM's. The TFP2 is shipped with a 256 KB x 8 Flash PROM (EEPROM) installed in the socket for internal programming. A RS232 interface is provided for connection to a PC allowing for downloading of the target's program code to the TFP2's internal EEPROM. This downloading utility along with target programming and additional status information is provided via a simple text based user interface.

The TFP2 supports target flash memory sizes of: 8KB, 16KB, 32KB, 64KB, 128KB and 256KB.

Once the TFP2's internal EEPROM is programmed, the PC may be removed for standalone operation. Standalone operation only performs the target FLASH memory programming. Once programmed, the target's FLASH memory contents are verified and a PASS or FAIL indication is reported. The TFP2 front panel incorporates two status LEDs. These status indications are also provided at the ATE connector and displayed by the PC User Interface.

Two target connectors are provided to facilitate custom target connections. The standard ADM-51 ribbon cable connector is provided along with a discrete wire connector. The discrete wire connector accommodates low cost, custom cable harnesses. These two cable connector interfaces are hardwired together and are not two separate interfaces.

1.2 SAFETY AND ESD NOTES

Standard ESD handling precautions should be employed whenever handling electronic equipment. The TSC Flash Programmer utilizes ESD protection devices on its cable interfaces. Potential equipment damage and/or malfunction is possible if work surface grounding procedures are not incorporated.



The TFP2 ESD protection devices do not protect the target's hardware. Correct handling procedures and proper work area grounding minimizes damage to all equipment!

1.3 DEMO BOARD CONTENTS

- Model TFP2 Flash Programmer
- 5VDC/1,000mA universal wall transformer with 2.5mm plug
- Serial cable, DB9, Male/Female, straight cable, 2m length (Digi-Key AE1020-ND)
- ATE cable housing and crimp pins
- Target-LS cable housing and crimp pins
- CHKSUM.EXE Utility Diskette
- Model TFP2 User Manual
- TFP2 Quick Start Guide

1.4 COMPATIBILITY

This manual applies to the following hardware and software revisions:

- TFP2 firmware revision 1.0 or later
- TFP2 hardware revision 1

1.5 SUGGESTED EQUIPMENT NOT INCLUDED

For use with optional text user interface operation (terminal emulation software):

- PC w/ MS-Windows[®] versions XT, ME, or 2000, equipped with RS232 port (COM port) via DB9 connector

2

2 TARGET CODE INITIALIZATION

Before the target's FLASH memory can be programmed, the target code must be transferred to the TFP2 for internal storage. First configure the TFP2 for the proper memory size of the target's code. Rotate the internal Memory Size rotary switch to the appropriate position. There is a black arrow on top of the rotary switch shaft denoting the switch position. Only 6 of the 8 switch positions are used. The other 2 positions are not used. A blinking red LED after applying power to the TFP2 indicates one of these unused positions is currently selected. Rotate the Memory Size Switch to a proper setting and re-apply power to the TFP2 to update the Memory Size setting.

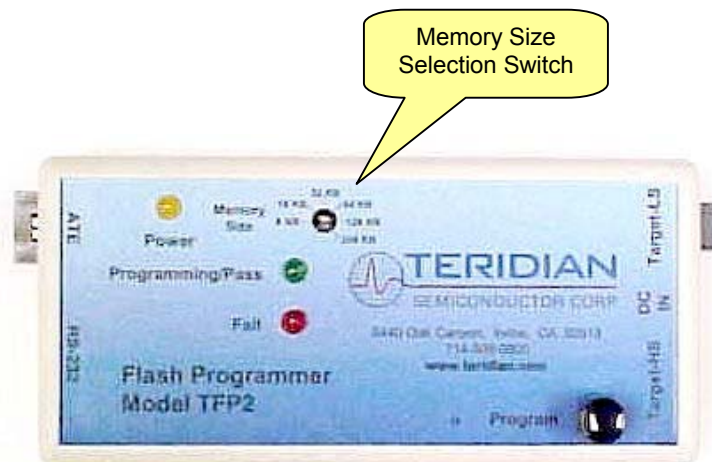


Figure 2-1: Memory Size Configuration

Figure 2-2 shows the basic RS232 connection of the TFP2 to a PC. Invoking a terminal emulator program such as Microsoft's Windows 2000® HyperTerminal, displays a simple text based user interface for controlling the TFP2. Refer to Chapter 4, PC User Interface for instructions on using the user interface.



Figure 2-2: TFP2 RS232 Connection to PC

2.1 POWER SUPPLY CONNECTION

The TFP2 is supplied with a universal AC/DC wall transformer. Alternatively, the TFP2 can be powered by another external power supply. The TFP2's power connector requires a 2.5 mm (inner diameter) power plug. The center conductor is the +VDC and the outer conductor is Ground. External power supply voltage range is +5VDC +/- 10% regulated. Maximum required power supply current is 200 mA.

NOTE: The TFP2 does not supply power at the Target-LS and Target-HS connectors. Power must be supplied to the target board separately. The TFP2 must be powered first before connecting the target board to the TFP2.

2.2 RS232 SERIAL CONNECTION

For connection of the DB9 serial port to a PC, a straight cable must be used.

PC Pin Male Connector	PC Function	TFP2 Pin Female Connector
2	RX	2
3	TX	3
5	Signal Ground	5

Table 2-1: RS232 Straight cable connections

2.3 SERIAL CONNECTION SETUP

After connecting the DB9 serial port to a PC, start the HyperTerminal application and create a session using 38400 baud, 8 bits, no parity, 1 stop bit, and XON/XOFF flow control. HyperTerminal can be found by selecting Programs → Accessories → Communications from the Windows® start menu. The connection parameters are configured by selecting File → Properties and then by pressing the Configure button. If the Configure button is not active, select Call → Disconnect. Port speed and flow control are configured under the General tab, and bit settings are configured by pressing the Configure button (Figure 2-4), as shown below.

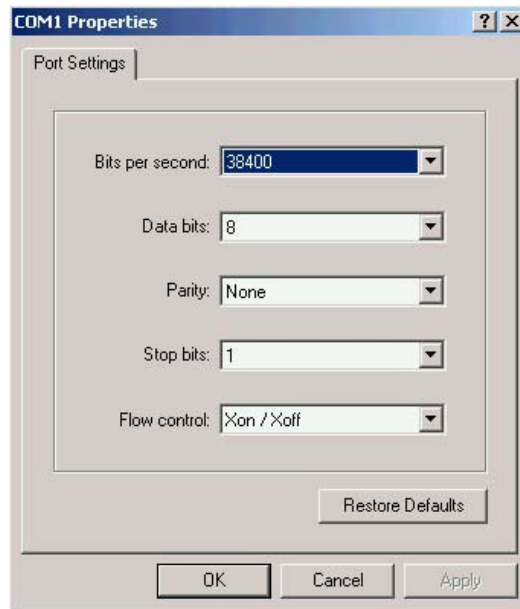


Figure 2-3: Port speed, port bit setup and flow control

Once, communication to the TFP2 is established, press the “Enter” key and the TFP2 program prompt “>” should appear. Typing “?” displays the TFP2 program help menu. Type “V” to verify that the TFP2 program version is revision 1.00 or later.

Refer to Chapter 4 for instructions on using the PC User Interface.

3

3 TARGET FLASH MEMORY PROGRAMMING

The TFP2 Flash Programmer connects to the target board via one of two connectors:

- 1) The Target-LS connector provides connection using discrete wires.

Only use this interface for TCLK frequencies of 10 MHz or less.



Figure 3-1: Target-LS Connection

- 2) The Target-HS connector utilizes the ADM-1 ribbon cable connector.

Must use this interface for TCLK frequencies of 10 MHz or faster.



Figure 3-2: Target-HS Connection

These two connectors are hard wired together. They are not two separate interfaces (two different target boards cannot be programmed concurrently).

The target connector pin assignments are as follows:

Target-LS Pin	Pin Function	TFP2 I/O
1	Ground	
2	TCLK	Input
3	Ground	
4	RESET	Output
5	ICE Enable	Output
6	RXTX	Bi-Directional

Table 3-1: Target-LS Connector Pins

 


Figure 3-3: Target-LS Connector Pin Locations (looking at TFP2 endplate)

The TFP2 does not supply power at the Target-LS connector. Power must be supplied to the target board separately. The TFP2 must be powered first before connecting the target board to the TFP2.

Target-LS Connector part numbers:

1. Connector Housing, 6 pin, 0.100
AMP 2-87977-8 (Digi-Key A25831)
2. Connector Pins, Crimp
AMP 102348-2 (Digi-Key A25943-ND)

Target-HS Pin	Pin Function	TFP2 I/O
1	Ground	
2	ICE Enable	Output
3	Ground	
4	RESET	Output
5	Ground	
6	TCLK	Input
7	Ground	
8	RXTX	Bi-Directional
9	Ground	
10	Not Used	
11	Ground	
12	Not Used	
13	Ground	
14	Not Used	
15	Ground	
16	Not Used	
17	Ground	
18	Not Used	
19	Ground	
20	Not Used	

Table 3-2: Target-HS Connector Pins

 


Figure 3-4: Target-HS Connector Pin Locations (looking at TFP2 endplate)

The TFP2 does not supply power at the Target-HS connector. Power must be supplied to the target board separately. The TFP2 must be powered first before connecting the target board to the TFP2.

Cable length must not exceed 12 inches for TCLK = 48 MHz operation.

Target-HS ribbon cable part numbers:

1. 20 pin flat ribbon cable connector, 0.050
 AMP 111194-4 (Digi-Key A29133-ND)
2. 20 conductor flat ribbon cable, 0.025
 Temp Flex F30007S-20-025-85

3.1 STANDALONE PROGRAMMING

With the TFP2's internal EEPROM initialized with the target's code as described in Chapter 2, and the target board connected to the TFP2 via the Target-LS connector or the Target-HS connector, programming of the target's flash memory may begin.



Figure 3-5: Standalone Configuration (shown with Target-LS cable for example)

When power is applied at the DC IN connector, the yellow power indicator LED is illuminated. Programming of the target FLASH Memory begins upon pressing the "Program" button. A momentary push button press of 100 msec, not to exceed 1 second is required to commence programming. Mass erase of the target's FLASH memory is performed first before programming of the code begins. The green Programming/Pass LED blinks while programming is in progress. Upon completion of programming, the target's FLASH Memory contents are read back for verification. The green Programming/Pass LED stops blinking and turns on solid if the target's FLASH Memory contents are verified as good. If verification fails, the red Fail LED turns on solid. If the TFP2 cannot communicate with the target, the red Fail LED turns on immediately. Communications failure may result from no target power, bad cable or faulty target board. No target FLASH Memory programming will have occurred when communication has not been established. Either LED indication is cleared upon re-pressing the Program button.

NOTE: The TFP2 must be powered first before connecting the target board to the TFP2.

NOTE: The target's watchdog timer must be enabled (V1 pin not connected to V3P3) and the target's ICE_E pin (if available on target device) must be connected to the appropriate TFP2 connector pin for target flash re-programming if the target's security bit is set.

3.2 PC USER INTERFACE PROGRAMMING

Alternatively, manual programming may be performed using the PC User Interface. The green and red LED indicators function as described above. The operational status information is also duplicated on the PC's screen. Refer to Chapter 4 for instructions on using the PC User Interface.



Figure 3-6: PC User Interface Configuration (shown with Target-HS cable for example)

NOTE: The TFP2 must be powered first before connecting the target board to the TFP2.

3.3 ATE FACTORY AUTOMATION PROGRAMMING

Automated programming of the target's FLASH Memory may be performed using the ATE connector. The interface signals provided at the ATE connector allow a factory automation computer to commence programming and monitor the status of the programming results. The ATE interface cannot download target code to the TFP2's internal EEPROM.



Figure 3-7: ATE Configuration (shown with Target-LS cable for example)

The TFP2 must be powered first before connecting the target board to the TFP2.

The ATE connector pin assignments are as follows:

ATE Pin	Pin Function	TFP2 I/O	Description
1	RESETB	Input	Active LO reset to TFP2 processor.
2	Ground		
3	PROGRAM	Input	Active HI signal starts target FLASH Memory programming. A minimum 200 ms pulse is required.
4	Ground		
5	PROGRAM ACTIVE	Output	Active Hi signal indicates target FLASH Memory programming in progress. De-assert PROGRAM upon PROGRAM ACTIVE going high.
6	Ground		
7	PASS	Output	Active HI signal indicates target FLASH Memory verified to be correct. PASS goes low when PROGRAM is re-asserted high. PASS toggles Hi and LO during programming sequence.
8	Ground		
9	FAIL	Output	Active HI signal indicates target FLASH Memory failed verification. FAIL goes low when PROGRAM is re-asserted high. FAIL toggles Hi and LO if the TFP2 cannot communicate with the target board.
10	Ground		

Table 3-3: ATE Connector Pins

 


Figure 3-8: ATE Connector Pin Locations (looking at TFP2 endplate)

ATE Connector part numbers:

1. Connector Housing, 10 pin, 0.100
AMP 3-87977-0 (Digi-Key A25835)
2. Connector Pins, Crimp
AMP 102348-2 (Digi-Key A25943-ND)

ATE interface Logic Level Specifications are given below:

Parameter	Min	Max	Description
Vih	+2.0V	+3.3V	Input high voltage
Vil	0.0V	+0.5V	Input low voltage

Table 3-4: ATE Connector Pin Input Voltage Thresholds

The RESET pin incorporates a 1kΩ pull-up resistor to +3.3V.

The PROGRAM pin incorporates a 1kΩ pull-down resistor to Ground.

Parameter	Min	Max	Description
Voh	+2.4V @ -2 ma	+3.3V	Output high voltage
Vol	0.0V	+0.45V @ 8 ma	Output low voltage

Table 3-5: ATE Connector Pin Output Voltage Levels

The PROGRAM ACTIVE, PASS and FAIL outputs incorporate 62Ω series resistors.

The following flow chart diagrams the programming sequence required of the ATE (must apply power to TFP2 Flash Programmer before the sequence below begins):

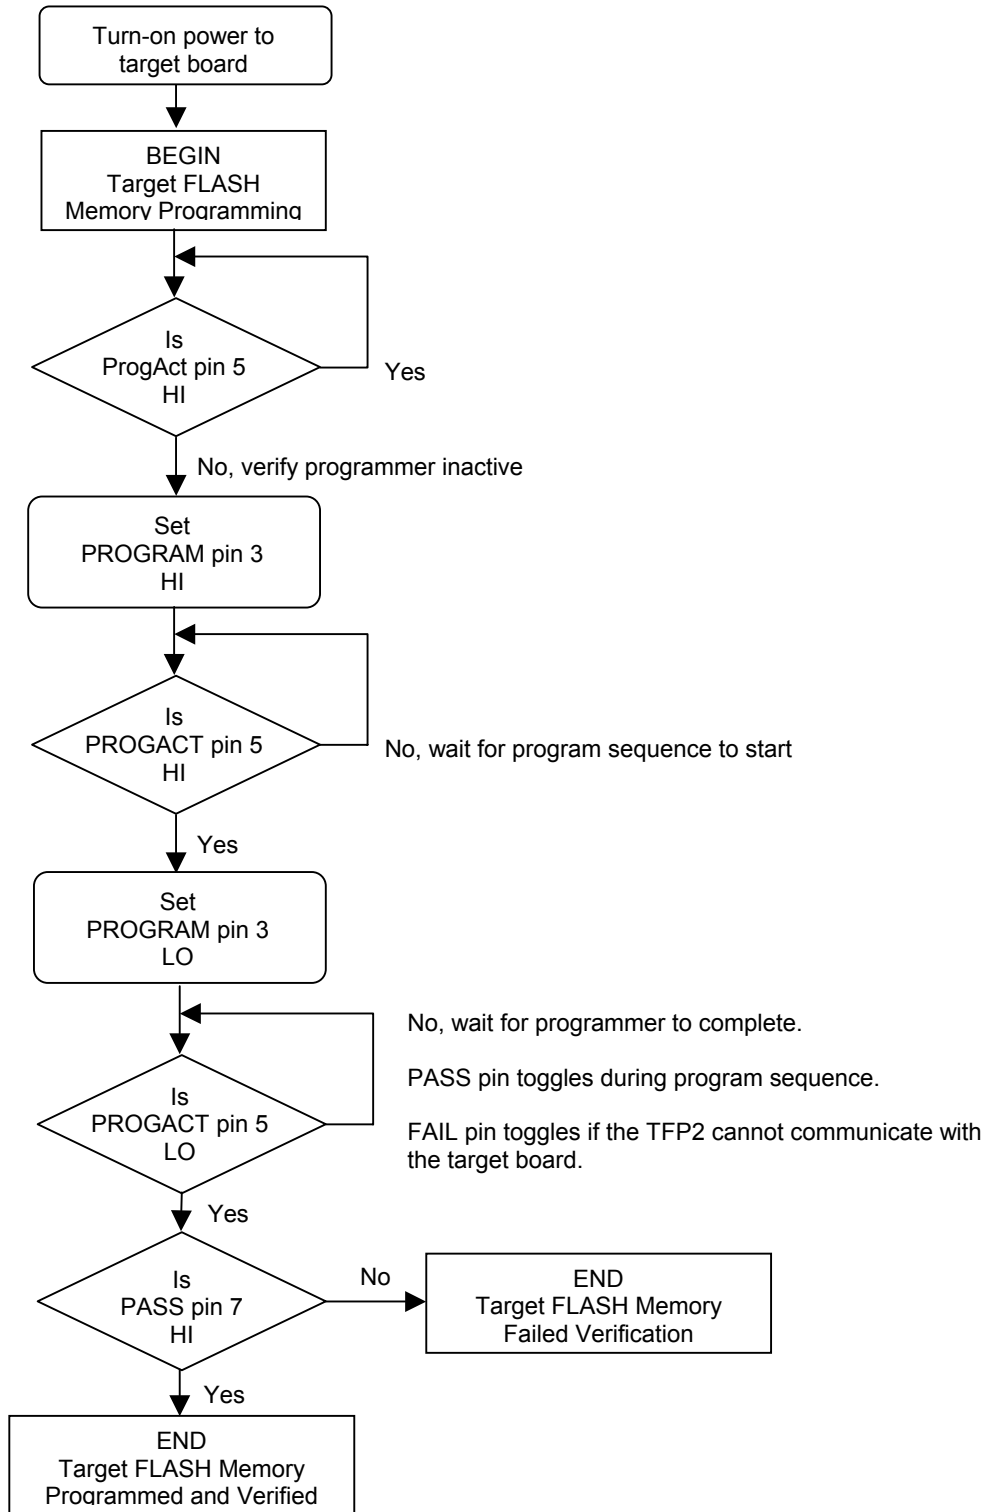


Figure 3-9: ATE Interface Flow Chart

4

4 PC USER INTERFACE

4.1 TFP2 CHKSUM.EXE UTILITY

Prior to downloading the target's hex file to the TFP2, the target's hex file must be pre-processed using the CHKSUM.EXE utility provided with the enclosed diskette. A hex file not processed with CHKSUM.EXE will result in incomplete programming of the target's FLASH memory. The target's code must be of the Extended Intel ASCII HEX-80 format for processing by CHKSUM.EXE.

From the DOS Command prompt, invoke CHKSUM.EXE as follows:


chksum **kb** <*infile*.hex >*outfile*.hex where:

kb = desired file size, Memory Size Switch setting to be used during TFP2 downloading and target programming

infile = target code hex file to be processed

outfile = processed target code hex file to be downloaded to TFP2

The following figure shows a typical invocation of CHKSUM.EXE:

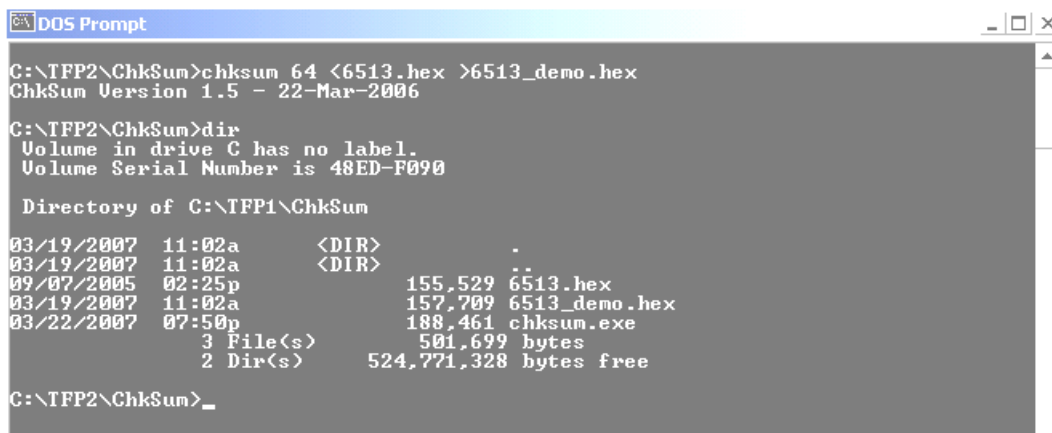

```

C:\TFP2\ChkSum>chksum 64 <6513.hex >6513_demo.hex
ChkSum Version 1.5 - 22-Mar-2006

C:\TFP2\ChkSum>dir
Volume in drive C has no label.
Volume Serial Number is 48ED-F090

Directory of C:\TFP1\ChkSum

03/19/2007  11:02a    <DIR>          .
03/19/2007  11:02a    <DIR>          ..
09/07/2005  02:25p             155,529 6513.hex
03/19/2007  11:02a             157,709 6513_demo.hex
03/22/2007  07:50p             188,461 chksum.exe
              3 File(s)          501,699 bytes
              2 Dir(s)          524,771,328 bytes free

C:\TFP2\ChkSum>_

```


Figure 4-1: CHKSUM.EXE Hex File Processing

The purpose of the CHKSUM utility is to organize the individual hex records into a contiguous “sequential address increasing” structure. Some compilers produce non-sequential hex files. The TFP2 assumes a sequential file structure. A non-sequential hex file downloaded to the TFP2 results in missing bytes (the missing bytes are the out-of-sequence hex records) in the target flash memory (when the target is then programmed with the TFP2).

The CHKSUM.EXE utility may or may not overwrite the last four bytes of the downloaded target hex file depending on whether these locations are used or not. The following cases apply to using the CHKSUM.EXE utility:

1. If the last four bytes of the target hex file are unused (0xFF), the CHKSUM.EXE utility will insert its own calculated two byte CRC and two byte checksum.
2. If any of the last four bytes of the target hex file are non-0xFF values, the CHKSUM.EXE utility will NOT overwrite the four original values.

The CHKSUM.EXE utility displays the following warning when it encounters non-0xFF values:

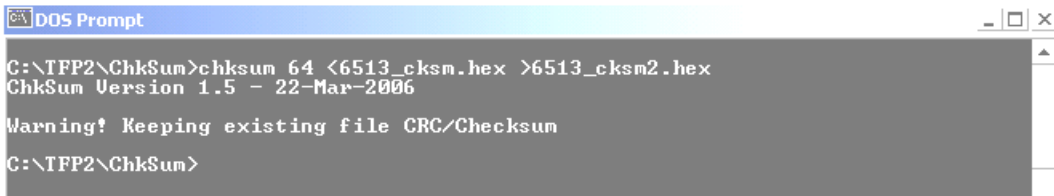


```
DOS Prompt
C:\TFP2\ChkSum>chksum 64 <6513_cksn.hex >6513_cksn2.hex
ChkSum Version 1.5 - 22-Mar-2006
Warning! Keeping existing file CRC/Checksum
C:\TFP2\ChkSum>
```

Figure 4-2: CHKSUM.EXE Warning Display

When programming the target FLASH memory, these last four bytes of the target hex file are transferred intact. Either the CHKSUM.EXE calculated CRC and checksum bytes are copied or the original target's hex data are copied. If the last two bytes of the target hex file are 0xFF (CHKSUM not used), the TFP2 overwrites the last two 0xFF bytes with its calculated checksum during the Hyper-Terminal file Download operation.

With HyperTerminal configured for serial COM port, 38400 baud, 1 stop bit, no parity, XON/XOFF (refer to Section 2.3 for serial communication setup information) the following information is displayed upon applying power to the TFP2. Any generic terminal emulation program will work. However, the target hex file download instructions presented apply to HyperTerminal.

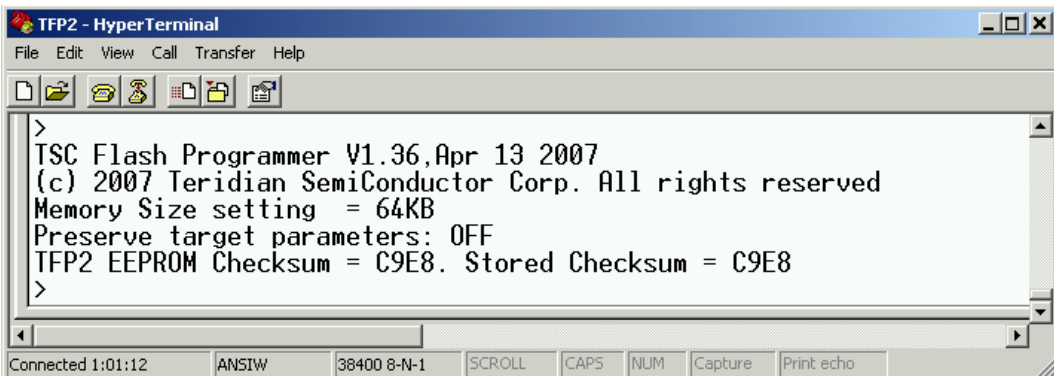


```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
>
TSC Flash Programmer V1.36, Apr 13 2007
(c) 2007 Teridian Semiconductor Corp. All rights reserved
Memory Size setting = 64KB
Preserve target parameters: OFF
TFP2 EEPROM Checksum = C9E8. Stored Checksum = C9E8
>
Connected 1:01:12  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure 4-3: TFP2 Power-Up Information Display

The Memory Size Switch setting and the checksum of the current target file stored in the TFP2's internal EEPROM are displayed. An "Invalid Memory Size setting" message appears if the Memory Size Switch is set to one of the invalid positions. Rotate the Memory Size Switch to a proper setting and re-apply power to the TFP2 to update the Memory Size setting.

If the target hex file has non-FF values in any of the last four bytes, the above power-on screen may display a "TFP2 EEPROM verification error." message. The displayed "TFP2 EEPROM Checksum =" value and "Stored Checksum =" value will be different. This occurs when the stored checksum value (from user's target file) is derived from a different checksum calculation from what the TFP2 uses. Therefore, the TFP2 cannot confirm the EEPROM's contents. However, the checksum verification error will not prevent the TFP2 from programming a target board. The "TFP2 EEPROM Checksum =" value is recalculated upon every power-on or system reset. Manual verification of the EEPROM's contents requires comparing the TFP2 EEPROM Checksum value derived after the file download to subsequent power-on recalculated checksum values. See Figure 4-8 for an example of a displayed checksum value after a file download.

Upon pressing the "Enter" key, the ">" character is displayed indicating the TFP2 acknowledges the PC's keyboard. Typing "?" followed by the "Enter" key displays the Help Menu.

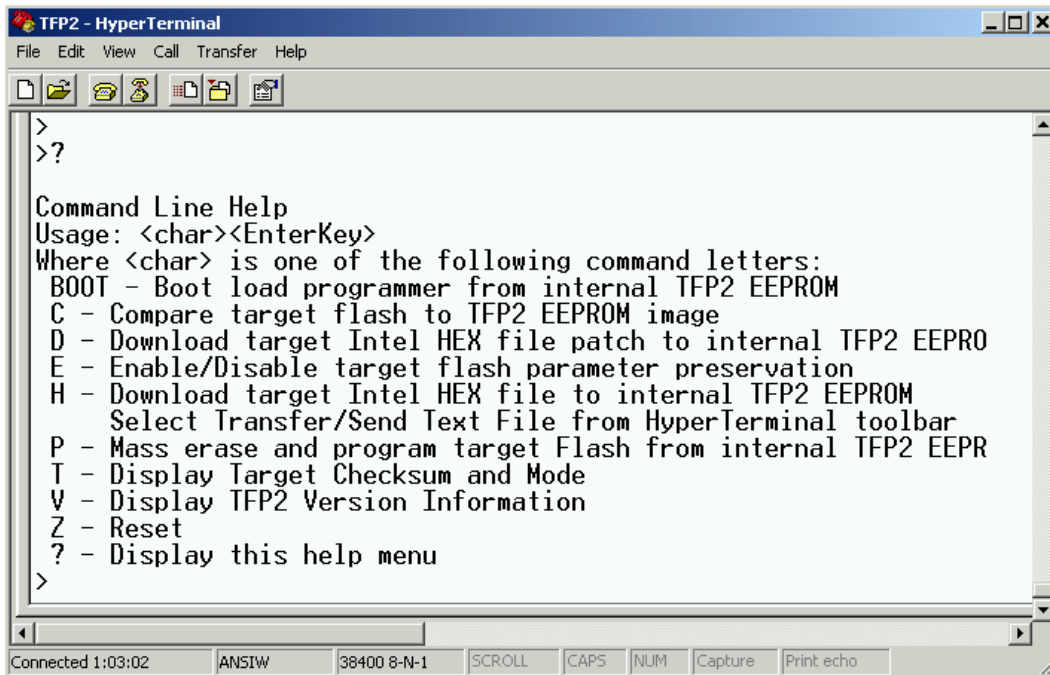

```

TFP2 - HyperTerminal
File Edit View Call Transfer Help
[Icons]
>
>?

Command Line Help
Usage: <char><EnterKey>
Where <char> is one of the following command letters:
BOOT - Boot load programmer from internal TFP2 EEPROM
C - Compare target flash to TFP2 EEPROM image
D - Download target Intel HEX file patch to internal TFP2 EEPRO
E - Enable/Disable target flash parameter preservation
H - Download target Intel HEX file to internal TFP2 EEPROM
  Select Transfer/Send Text File from HyperTerminal toolbar
P - Mass erase and program target Flash from internal TFP2 EEPR
T - Display Target Checksum and Mode
V - Display TFP2 Version Information
Z - Reset
? - Display this help menu
>

Connected 1:03:02  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure 4-4: TFP2 Help Menu

Commands C, E, T, V, Z and ? are single keystroke events (no further user action required until the TFP2 completes the intended task). The D, H and P commands require additional user action and are described in Section 4.6, Section 4.2 and Section 4.3, respectively. The BOOT command is a special user action and is described in Section 5.

The following tables show the results of the last two words of the hex file after using CHKSUM and after downloading and programming using the TFP2. The referenced addresses assume use of a 64KB flash memory configuration.

Initial Hex File Data	File Address 0xFFFC	File Address 0xFFE
Hex File with 0xFF	0xFFFF	0xFFFF
Hex File with non-0xFF CRC	UserData	0xFFFF
Hex File with non-0xFF Checksum	0xFFFF	UserData
Hex File with non-0xFF CRC and non-0xFF Checksum	UserData	UserData

Table 4-1: CHKSUM Utility Addresses

Upon executing CHKSUM, the first line displayed contains the CHKSUM version. The following table shows the results of processing the above hex files with CHKSUM.

Hex File Data after using CHKSUM	CHKSUM v1.5	
	File Address 0xFFFC	File Address 0xFFE
Hex File with 0xFF	0xFFFF	Teridian Checksum
Hex File with non-0xFF CRC	UserData	Teridian Checksum
Hex File with non-0xFF Checksum	0xFFFF	UserData
Hex File with non-0xFF CRC and non-0xFF Checksum	UserData	UserData

Table 4-2: CHKSUM Utility Output Data

The TFP2 Download Verify and Power-Up Verify expects to read the Teridian checksum. For the following examples shown below, a Download Verify fail and Power-Up Verify fail occurs because the user data is preserved (rather than over-writing with the Teridian values). A Download Verify fail and Power-Up Verify fail does not prevent correct target memory programming (these messages are informational only). The Teridian checksum insertion (over-writing) may only occur when using CHKSUM or during the TFP2 download (if 0xFF values are encountered).

The TFP2 programs into the target memory what was previously downloaded (once downloaded, the last two words do not change during programming). The TFP2 then verifies the target memory to its internal memory resulting in the correct PASS indication even when user data is present.

Target Data after using TFP2	Target Address 0xFFFFC	Target Address 0xFFFFE	Comments
Hex File with 0xFF	0xFFFF	Teridian Checksum	Program Verify Passes Download Verify Passes Power-Up Verify Passes
Hex File with 0xFF after CHKSUM v1.5	0xFFFF	Teridian Checksum	Program Verify Passes Download Verify Passes Power-Up Verify Passes
Hex File with non-0xFF CRC	UserData	Teridian Checksum	Program Verify Passes Download Verify Fails Power-Up Verify Fails
Hex File with non-0xFF CRC after CHKSUM v1.5 (includes UserData into its Checksum)	UserData	Teridian Checksum	Program Verify Passes Download Verify Passes Power-Up Verify Passes
Hex File with non-0xFF Checksum	0xFFFF	UserData	Program Verify Passes Download Verify Fails Power-Up Verify Fails
Hex File with non-0xFF Checksum after CHKSUM v1.5	0xFFFF	UserData	Program Verify Passes Download Verify Fails Power-Up Verify Fails
Hex File with non-0xFF CRC and non-0xFF Checksum	UserData	UserData	Program Verify Passes Download Verify Fails Power-Up Verify Fails
Hex File with non-0xFF CRC and non-0xFF Checksum after CHKSUM v1.5	UserData	UserData	Program Verify Passes Download Verify Fails Power-Up Verify Fails

Table 4-3: CHKSUM Utility Data Dependency

4.2 TFP2 EEPROM DOWNLOAD

Transfer of the target's code from a PC to the TFP2 begins with the "H" command. The target code file must have been preprocessed using the CHKSUM.EXE utility provided on the enclosed diskette. Refer to Section 4.1 for instructions on using CHKSUM.EXE. Use of any other format results in malfunction and download checksum errors.

After typing "H" followed by the "Enter" key, the cursor moves to the following line. Next, click on the "Transfer" button and scroll down to "Send Text File" to select the desired file to be downloaded.

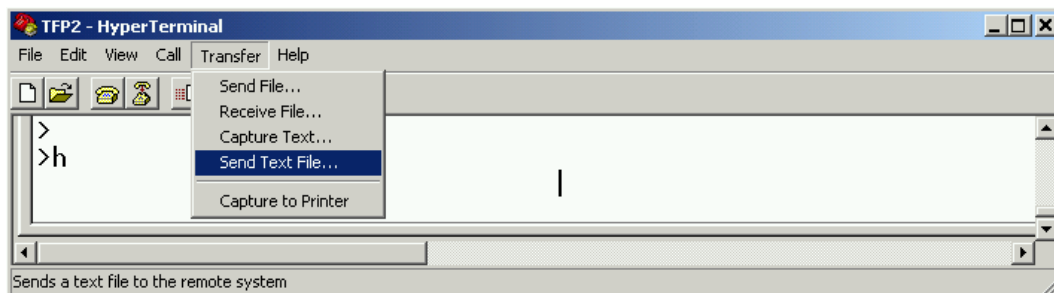


Figure 4-5: TFP2 Intel Hex File Download to Internal EEPROM Command

Enable the "All files (*.*)" for file type and select your desired target Intel Hex code file from the appropriate sub-directory.

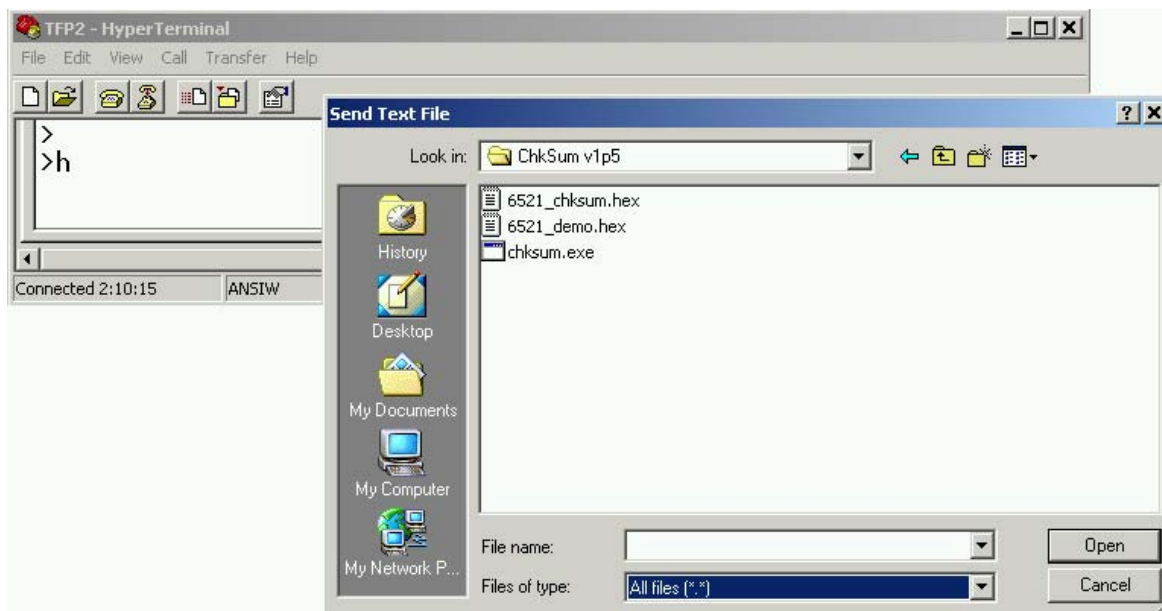


Figure 4-6: TFP2 Select Target Intel Hex File

Upon clicking on “Open” a rotating prompt is displayed indicating the file download is in progress.

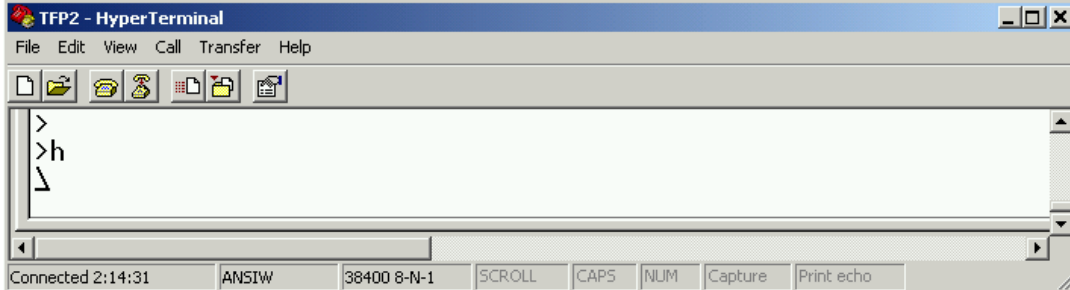


Figure 4-7: TFP2 Download in Progress

When the file download completes, the number of bytes transferred is displayed. A running CRC is calculated during the file download for each byte received for programming into the TFP2 internal EERPOM. The running CRC calculated during the file download is compared to the embedded CRCs of the individual byte records within the hex file for appropriate PASS and FAIL indication. Additionally, the appropriate green or red LED is illuminated. The TFP2 EEPROM checksum calculation value is based on the memory size switch setting and is displayed for future reference. The download transfer times may vary from 15 minutes to 1 minute for a 64 KB file size. The Microsoft® Windows 2000 Service Pak 4 or later affords the faster download time.


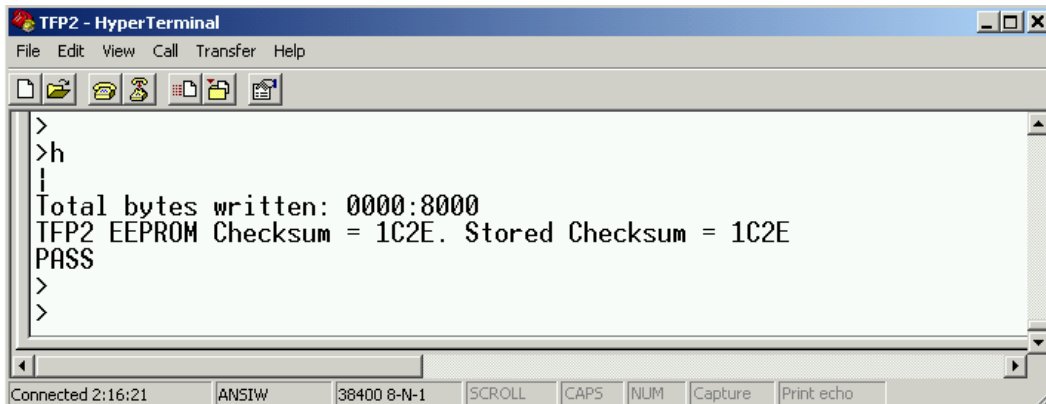


Figure 4-8: TFP2 Download Complete

Possible reasons for a FAIL indication upon downloading a file to the TFP2:

1. Downloaded file not Intel Hex format.
2. USB to RS232 dongle communication problem (increase Line delay to 10 msec.).
3. USB to RS232 dongle does not support XON/OFF.
4. XON/XOFF protocol failure, close and restart Hyper-Terminal.
5. The following messages appear when the Memory Size Switch setting is too small for the downloaded file.

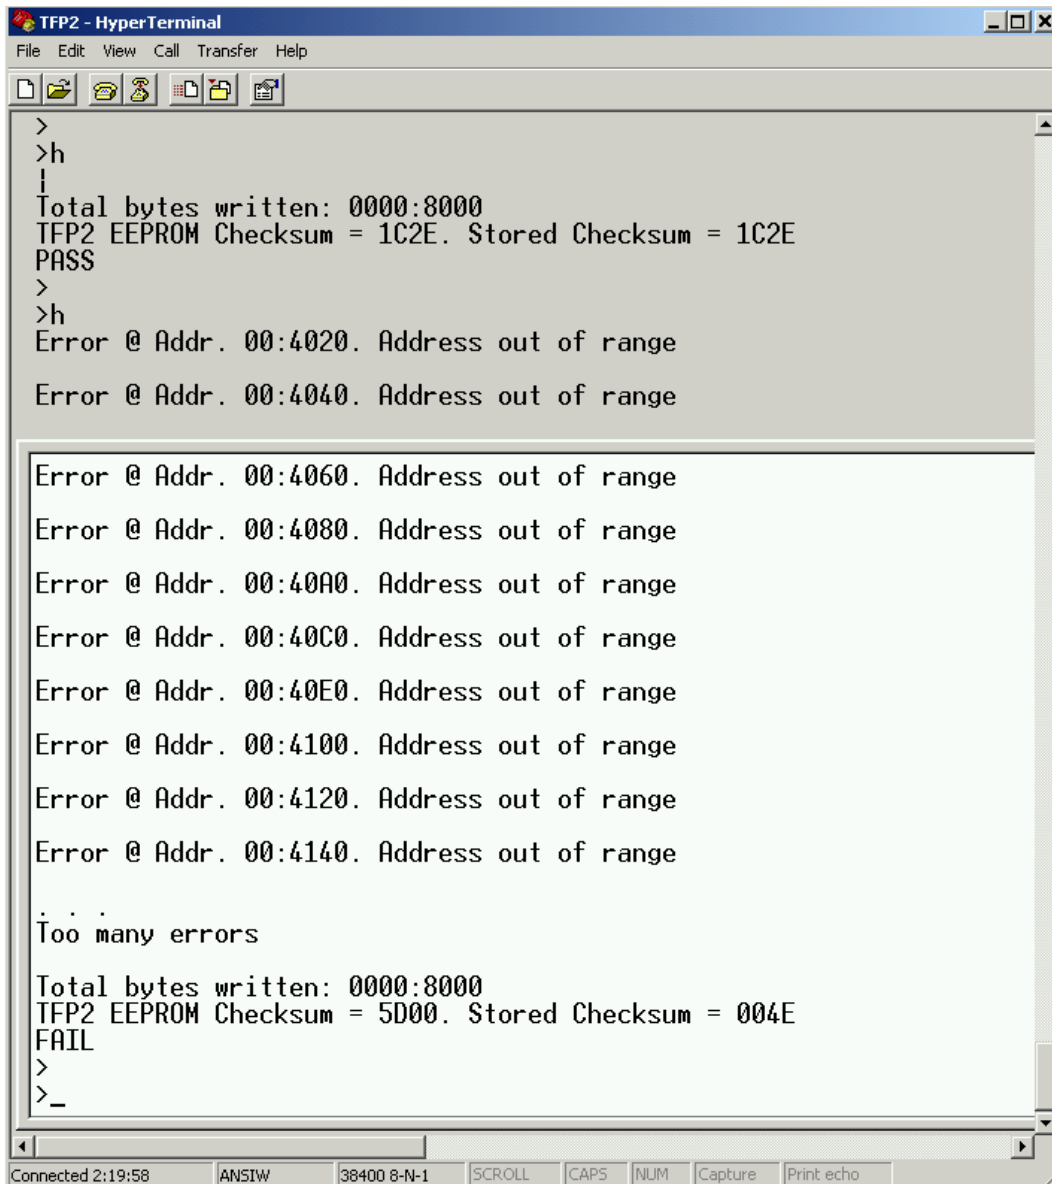

```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
[Icons]
>
>h
|
Total bytes written: 0000:8000
TFP2 EEPROM Checksum = 1C2E. Stored Checksum = 1C2E
PASS
>
>h
Error @ Addr. 00:4020. Address out of range
Error @ Addr. 00:4040. Address out of range

Error @ Addr. 00:4060. Address out of range
Error @ Addr. 00:4080. Address out of range
Error @ Addr. 00:40A0. Address out of range
Error @ Addr. 00:40C0. Address out of range
Error @ Addr. 00:40E0. Address out of range
Error @ Addr. 00:4100. Address out of range
Error @ Addr. 00:4120. Address out of range
Error @ Addr. 00:4140. Address out of range


. . .
Too many errors

Total bytes written: 0000:8000
TFP2 EEPROM Checksum = 5D00. Stored Checksum = 004E
FAIL
>
>_
Connected 2:19:58  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure 4-9: TFP2 Download Fail due to Incorrect Memory Size Setting

4.3 TARGET FLASH MEMORY PROGRAMMING


Programming of the target's FLASH memory begins with typing "P" followed by the "Enter" key. The green LED on the TFP2's front panel blinks while the target FLASH memory is being mass erased, programmed and verified. The red LED will momentarily flash on at the start of programming. Upon completion of the target FLASH memory programming the following display appears. Additionally, the green or red LED is illuminated upon completion of the target FLASH memory programming.

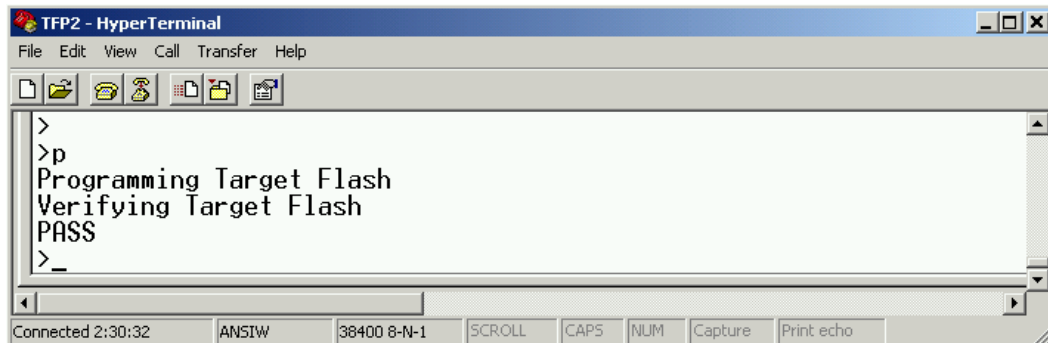

```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
[Icons]
>
>p
Programming Target Flash
Verifying Target Flash
PASS
>_
Connected 2:30:32  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure 4-10: TFP2 Target Mass Erase and Program Command

If the existing device's security bit is set, the TFP2 prompts for confirmation that programming is to continue.

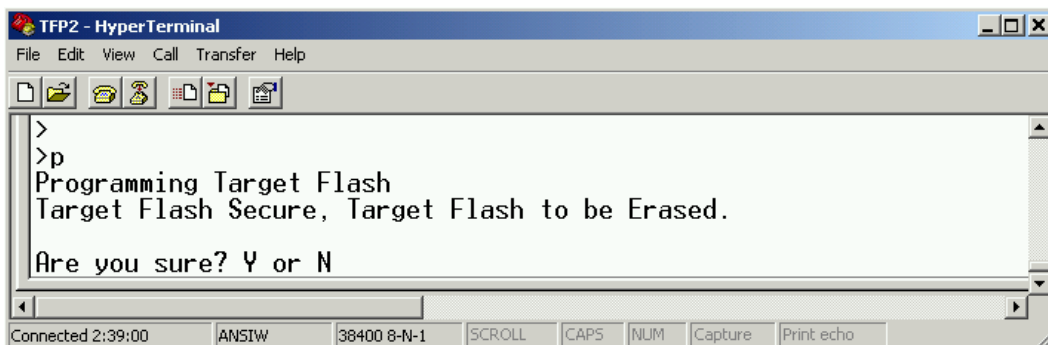


```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
[Icons]
>
>p
Programming Target Flash
Target Flash Secure, Target Flash to be Erased.
Are you sure? Y or N
Connected 2:39:00  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure 4-11: Existing Device's Security Bit Set

Type an uppercase "Y" to continue device programming.

Pressing the Program Button on the front panel of the TFP2 automatically proceeds with device programming regardless of the security bit setting.

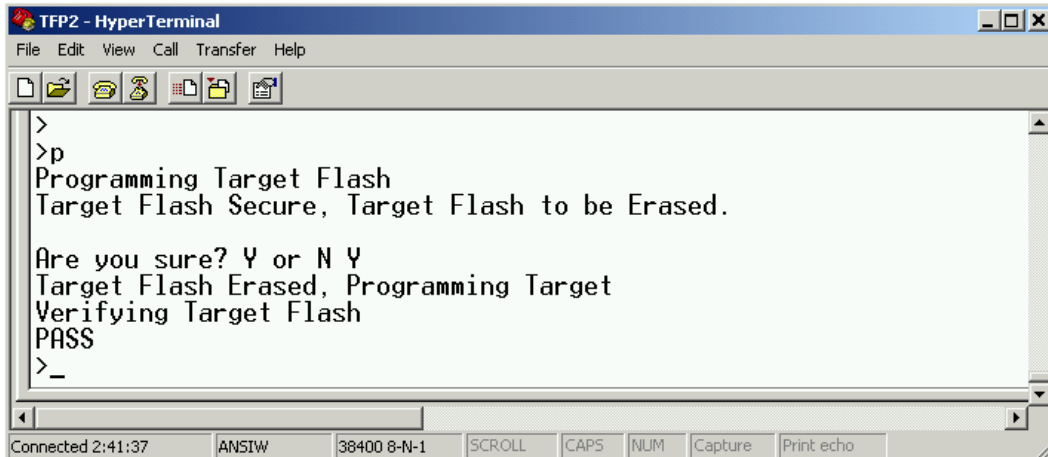

```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
>
>p
Programming Target Flash
Target Flash Secure, Target Flash to be Erased.
Are you sure? Y or N Y
Target Flash Erased, Programming Target
Verifying Target Flash
PASS
>_
Connected 2:41:37 ANSIW 38400 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure 4-12: Programming Overrides Security Bit

If the TFP2 cannot communicate with the target board, a “Command Timeout” message appears. Possible reasons for a Command Timeout indication upon programming the target board:

1. Power not provided to target board preventing TFP2 communication with target board.
2. Bad cable connecting TFP2 to target board preventing TFP2 communication with target board.
3. Mal-functioning target board preventing TFP2 communication with target board.


NOTE: The TFP2 must be powered first before connecting the target board to the TFP2.

NOTE: The target’s watchdog timer must be enabled (V1 pin not connected to V3P3) and the target’s ICE_E pin must be connected to the appropriate TFP2 connector pin for target flash re-programming if the target’s security bit is set.

NOTE: Wrong Memory Size switch setting will result in a Verification Error FAIL message.

4.4 PREVIOUSLY PROGRAMMED DEVICE VERIFICATION


A previously programmed device can be checked against the currently loaded image contained in the TFP2. Use the "C" command to perform this comparison. The green LEDs are illuminated if the flash contents of the device in the socket match the contents of the TFP2 EEPROMs.

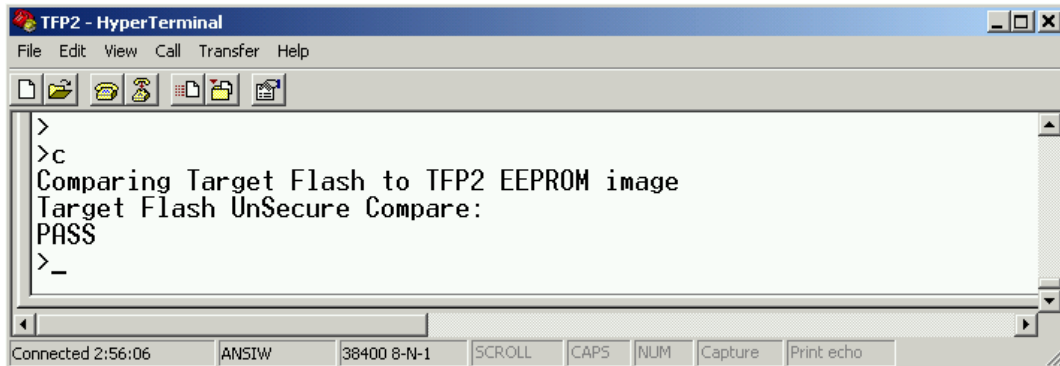

```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
>
>c
Comparing Target Flash to TFP2 EEPROM image
Target Flash UnSecure Compare:
PASS
>_
Connected 2:56:06  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure 4-13: Previously Programmed Device Check

If the security bit is set, the target's FLASH memory cannot be read. Therefore, the Compare results will fail as shown below. The red LEDs are illuminated indicating this condition.

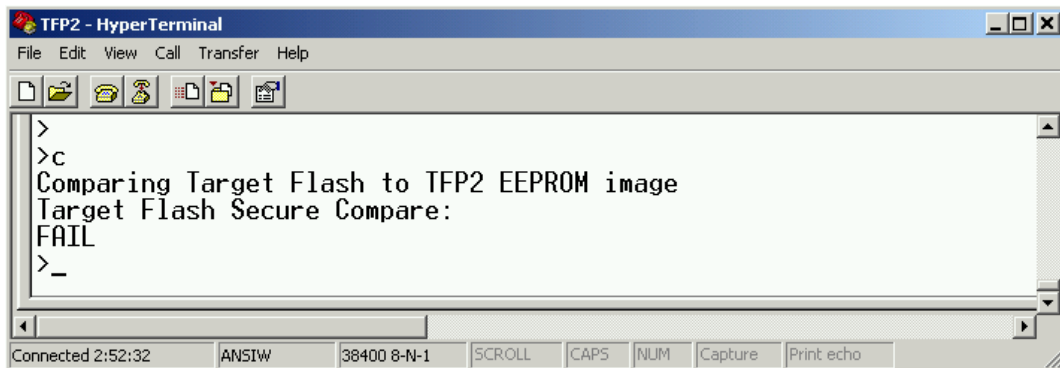


```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
>
>c
Comparing Target Flash to TFP2 EEPROM image
Target Flash Secure Compare:
FAIL
>_
Connected 2:52:32  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure 4-14: Previously Programmed Device Check with Security Bit Set

4.5 DEVICE STATUS CHECK

The contents of a device may be read-back to display its current security bit setting and checksum. Use the “T” command to perform this read-back.

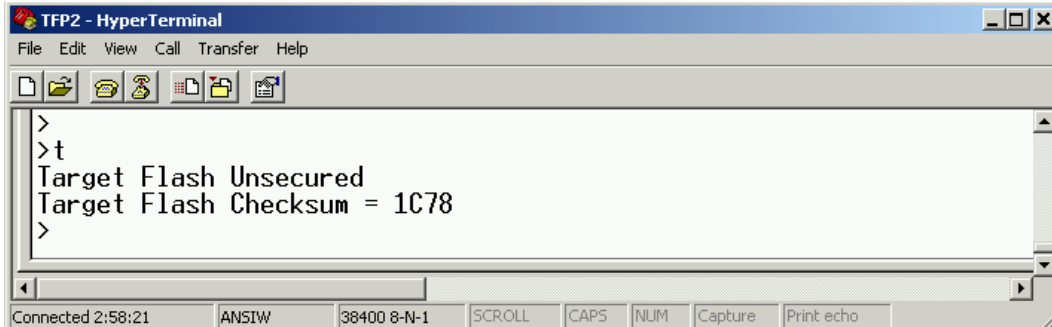


```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
>
>t
Target Flash Unsecured
Target Flash Checksum = 1C78
>
```

Connected 2:58:21 ANSIW 38400 8-N-1 SCROLL CAPS NUM Capture Print echo

Figure 4-15: Device Checksum and Security Bit Status

If the security bit is set, the target's FLASH memory cannot be read. Therefore, the Status results cannot be displayed as shown below.

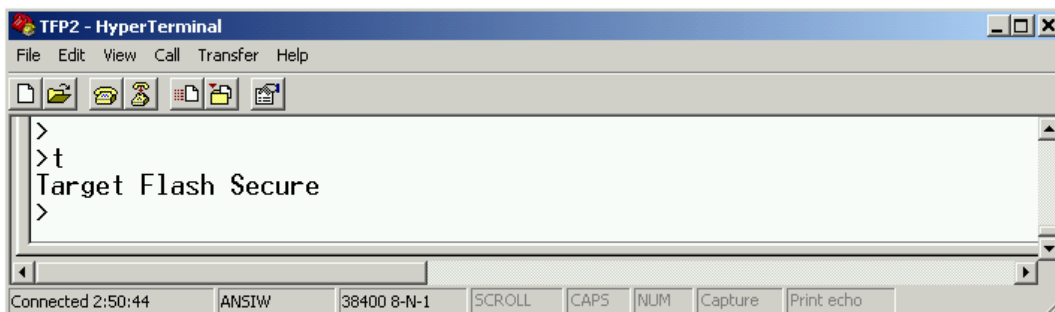

```
TFP2 - HyperTerminal
File Edit View Call Transfer Help
>
>t
Target Flash Secure
>
```

Connected 2:50:44 ANSIW 38400 8-N-1 SCROLL CAPS NUM Capture Print echo

Figure 4-16: Device Checksum and Security Bit Status with Security Bit Set

4.6 CODE OR PARAMETER UPDATE

The TFP2 firmware typically performs a block erase prior to programming the device's flash memory. Additionally, the TFP2 programs the entire address space of the flash memory. The "D" command allows for programming only a small portion of the target's FLASH memory, i.e. – code patch or parameters.

Use the "D" command to download a code patch or a parameter table to the TFP2 EEPROM without erasing and reprogramming the entire TFP2 EEPROM memory. The memory locations to be reprogrammed are read from the downloaded Hex File. Follow the same instructions of Section 4.2 regarding selecting "Send Text File" menu option after typing the "D" command.

Use the "P" command or the PROGRAM button to program the target board's FLASH memory with the updated TFP2 EEPROM contents.

The TFP2 Power-Up checksum verification expects to read the original Teridian checksum. The Power-Up checksum verification may fail due to the code change. A Power-Up Verify fail does not prevent correct device memory programming (these messages are informational only). Use the "T" command to verify the current device checksum.

4.7 PARAMETER PRESERVATION PROGRAMMING

The TFP2 firmware typically performs a block erase prior to programming the device's flash memory. Additionally, the TFP2 programs the entire address space of the flash memory. Optionally, the TFP2 can reserve 4KB of flash memory for code or parameter tables.

Use the "E" command to toggle whether the 4KB is preserved or erased/over-written during the "P" programming operation. The Parameter Mode status change is displayed as shown below.

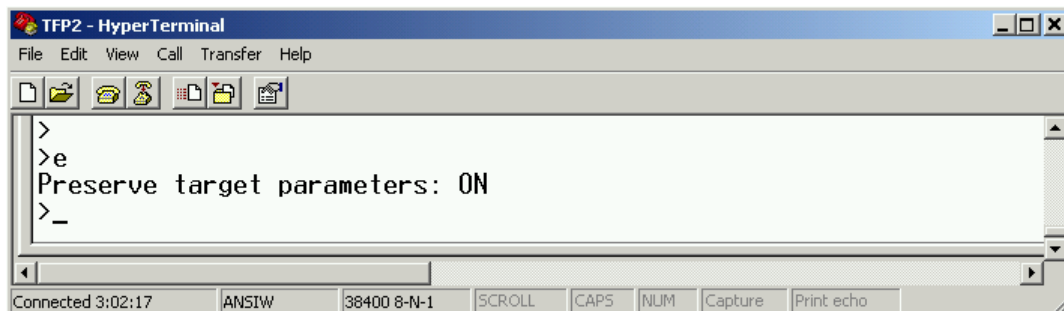


Figure 4-17: Parameter Mode Selection

After setting the Parameter Mode using the "E" command, programming can be initiated using the "P" command or by pressing the front panel Program button.

When Parameter Mode preservation is enabled, the TFP2 programming operation copies the existing parameter data from the target device. A bulk erase and reprogramming of the target's FLASH memory is performed. The TFP2 then restores the previously copied parameter data starting at its highest address location. Parameter data is re-written to decreasing address locations until all parameter data locations have been restored. If new code (non 0xFF data) is encountered (above the lowest reserved parameter address location) the message "No parameters preserved" is displayed during the programming operation.

The location of the 4KB parameter space depends on the target device's FLASH memory size. The TFP2 determines the target FLASH memory size from the front panel Memory Size switch. The following table shows the reserved address locations of parameter space for different memory sizes.

Memory Size Switch	Parameter Space Start Address	Parameter Space End Address
8KB	Not Used	Not Used
16KB	0x2000	0x2FFF
32KB	0x5000	0x5FFF
64KB	0xD000	0xDFFF
128KB	0x0001:D000	0x0001:DFFF
256KB	0x0003:D000	0x0003:DFFF

Table 4-4: Parameter Space Address Location


Usage of the above parameter space assumes new program code does not exist at the previous parameter(s) address locations. The TFP2 also assumes that the parameters are stored as a contiguous block. This block of parameters can be located anywhere within the reserved memory locations.

Locating the parameters at the end of the Parameter Space allows for the program code to “grow” into the lower addresses of the parameter space.

The location of the contiguous parameter block is determined by searching for a non 0xFF data byte beginning at the Parameter Space “End Address” of the TFP2’s EEPROM image. The address counter is decremented until a non 0xFF value is found. This locates the lowest address of the parameter data, the “End Address” being the highest address.

The TFP2 Power-Up checksum verification expects to read the original Teridian checksum. The Power-Up checksum verification may fail due to the code change. A Power-Up Verify fail does not prevent correct device memory programming (these messages are informational only). Use the “T” command to verify the current device checksum. The “T” command always includes the Parameter Space addresses in its checksum calculation regardless of the Parameter Preservation Mode setting. However, the “C” command operation varies with the Parameter Preservation Mode setting. The Parameter Space addresses are included in the comparison when Parameter Preservation Mode is OFF. Otherwise, the Parameter Space addresses are ignored if Parameter Preservation Mode is ON.

The Parameter Mode status is also displayed in the power-up initialization messages.

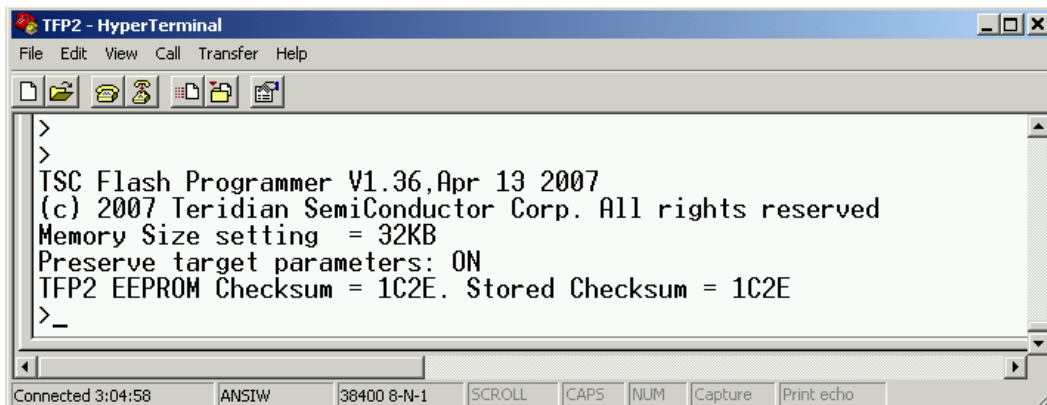

```

TFP2 - HyperTerminal
File Edit View Call Transfer Help
[Icons]
>
>
TSC Flash Programmer V1.36, Apr 13 2007
(c) 2007 Teridian Semiconductor Corp. All rights reserved
Memory Size setting = 32KB
Preserve target parameters: ON
TFP2 EEPROM Checksum = 1C2E. Stored Checksum = 1C2E
>_
Connected 3:04:58  ANSIW  38400 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure 4-18: Parameter Mode Status

5

5 BOOT LOADER

The TFP2 Boot Loader enables the TFP2 firmware to be upgraded in the field (remote location). The Teridian Semiconductor provided TFP2 firmware file is first downloaded to the TFP2's EEPROM. Transfer of this revised firmware file from the TFP2's EEPROM to its local program memory is performed by typing "BOOT" at the command prompt. Detailed Boot Loader instructions are provided in the following section.

5.1 BOOT LOADER OPERATION

Reprogramming (upgrading) of the TFP2's program memory is accomplished with the following steps:

1. Set front panel Memory Size switch to 64 KB position.
2. Download the new TFP2 firmware file using the "H" command. Follow the instructions described in section 4.2.
3. Update the TFP2 program memory using the "BOOT" command. The "BOOT" characters must be upper case.


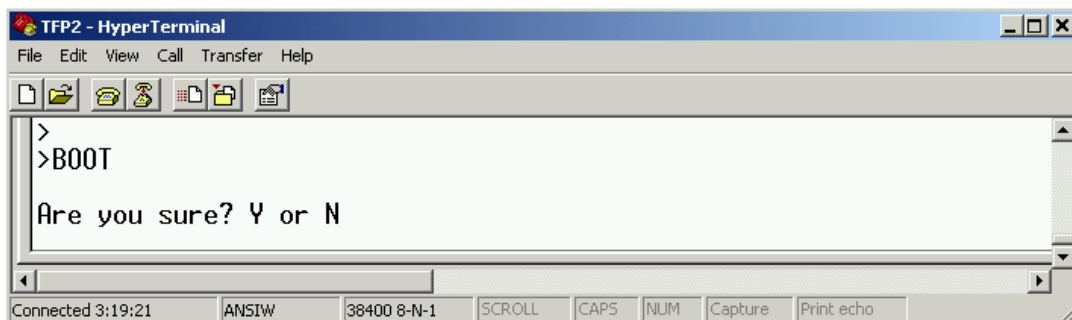


Figure 5-1: TFP2 Reprogram TFP2 Program Memory

4. To proceed with reprogramming the TFP2, type an upper case "Y". The green PASS led blinks during the reprogramming process. The TFP2 restarts itself once reprogramming is complete.

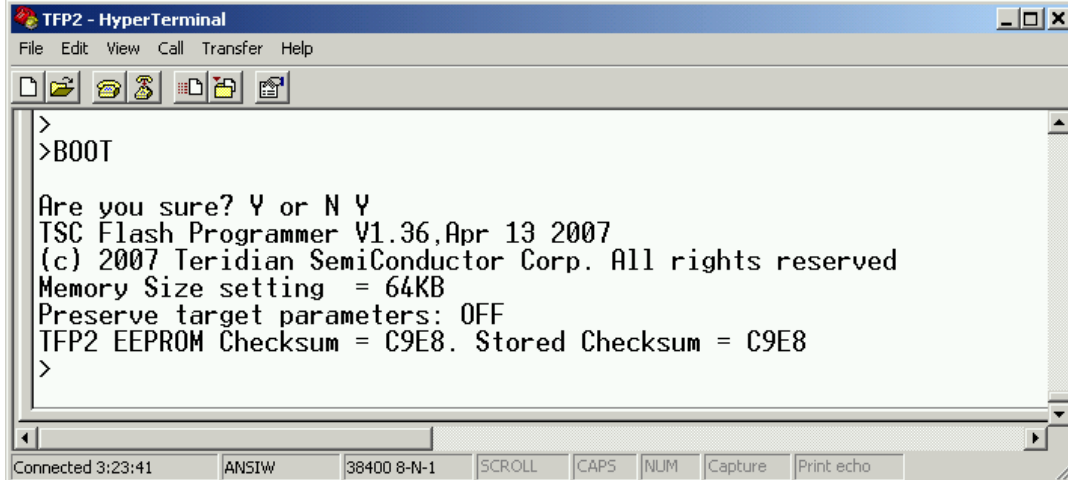

```
>
>BOOT

Are you sure? Y or N Y
TSC Flash Programmer V1.36, Apr 13 2007
(c) 2007 Teridian Semiconductor Corp. All rights reserved
Memory Size setting = 64KB
Preserve target parameters: OFF
TFP2 EEPROM Checksum = C9E8. Stored Checksum = C9E8
>
```

Figure 5-2: TFP2 Boot Completion

If the internal TFP2 EEPROM contents are corrupted (checksum comparison failure) or if the EEPROM contents do not represent a TFP2 code file (user's target code), the BOOT command will NOT reprogram the TFP2. The current power-on screen is immediately displayed with no flashing PASS led when a problem is encountered with the EEPROM contents.



6 STATUS INDICATIONS

6.1 NORMAL OPERATION

Normal front panel LED operation:

5. Green LED blinks during target FLASH memory programming and verification.
6. Green LED on 100% when target FLASH memory verified as good.
7. Red LED never on during normal operation.

Normal ATE status signal operation:

1. ProgramActive pin high during target FLASH memory programming and verification.
2. PASS pin toggles HI and LO during target FLASH memory programming and verification.
3. ProgramActive pin low upon completion of target FLASH memory verification.
4. PASS pin high when target FLASH memory verified as good.
5. FAIL pin never high during normal operation.

6.2 ERROR CONDITIONS

Front panel Red LED error codes:

1. Red LED blinks after power-on – Incorrect Memory Switch setting: either position 6 or 7 selected.
2. Red LED on 100% after TFP2 download – TFP2 download CRC failed.
3. Red LED on 100% immediately upon Target programming – Target not responding upon attempted programming.
4. Red LED on 100% after power-on – TFP2 does not power-up correctly.
5. Red LED on 100% after programming – Target FLASH memory fails verification.

ATE FAIL status signal error codes:

ProgramActive pin LO and FAIL pin HI immediately - Target not responding upon attempted programming.

ProgramActive pin LO and FAIL pin HI after ProgramActive was HI- Target FLASH memory fails verification.



7 TFP2 HARDWARE SPECIFICATIONS

Case Dimensions

- Dimensions 6.0" x 2.5" x 1.5"
- Weight 0.35 lbs.

Environmental

- Operating Temperature +10°...+50°C
- Storage Temperature -40°C...85°C

Power Supply

- Supply Voltage +5VDC +/- 10% regulated
- Supply Current 200 mA max
- Cable Plug 2.5 mm Diameter

ATE Connector

- Input Voltage Lo 0.0V to +0.5V
- Input Voltage Hi +2.0V to +3.3V
- Output Voltage Lo +0.45V max @ 8 ma
- Output Voltage Hi +2.4V min @ 2 ma

Target Connector

- Input Voltage Lo 0.0V to +0.5V
- Input Voltage Hi +2.0V to +3.3V
- Output Voltage Lo +0.45V max @ 8 ma
- Output Voltage Hi +2.4V min @ 2 ma
- TCLK Frequency 10 MHz to 48 MHz

User Manual: This User Manual contains proprietary product definition information of Teridian Semiconductor Corporation (TSC) and is made available for informational purposes only. TSC assumes no obligation regarding future manufacture, unless agreed to in writing.

If and when manufactured and sold, this product is sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement and limitation of liability. Teridian Semiconductor Corporation (TSC) reserves the right to make changes in specifications at any time without notice. Accordingly, the reader is cautioned to verify that a data sheet is current before placing orders. TSC assumes no liability for applications assistance.

Teridian Semiconductor Corp., 6440 Oak Canyon Rd., Irvine, CA 92618-5201

TEL (714) 508-8800, FAX (714) 508-8877, <http://www.teridian.com>